PMA-55 ADA[TER FOR SE-701, SE-703, SE-704, OR SE-601

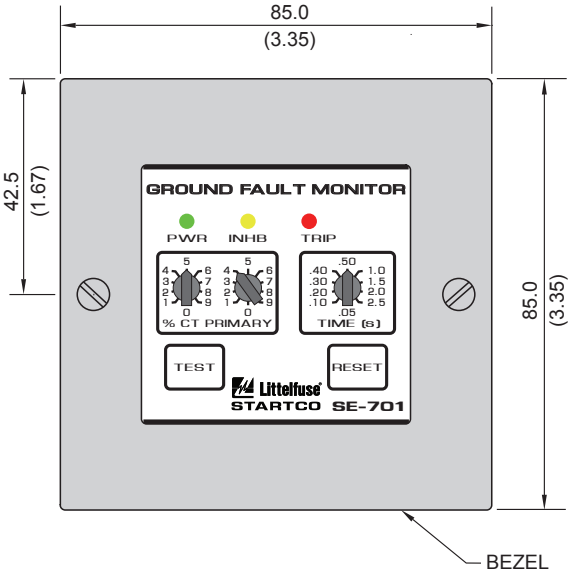

FRONT VIEW

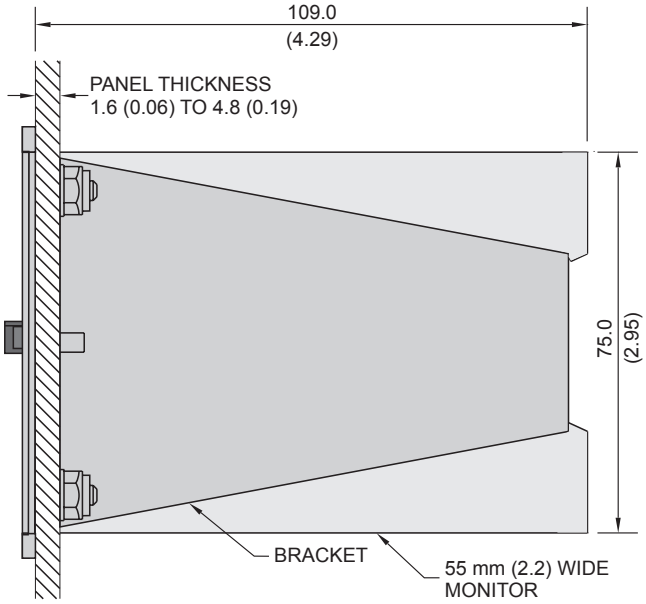

SIDE VIEW

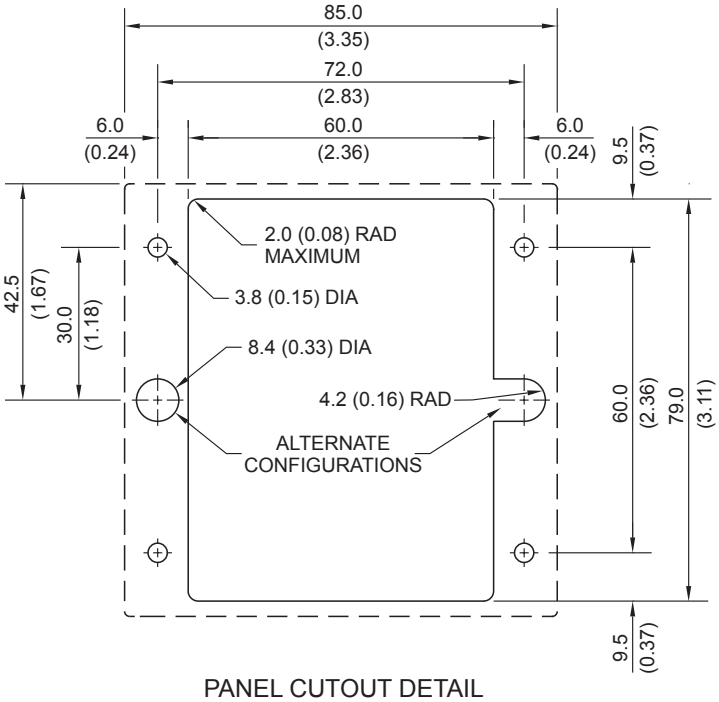

PANEL CUTOUT DETAIL

Installation Instructions:

1. *Remove bezel and latch monitor on bracket.*
2. *Insert bracket through front of panel cutout and secure with flat washers and locknuts provided.*
3. *Connect wiring to terminals.*
4. *Install bezel using 6-32 x 0.31 screws provided.*

NOTES:

1. *Dimensions in millimetres (inches).*
2. *Ground-fault monitor must be ordered separately with full part number.*

© 2018 Littelfuse