


**PGR-4704 MANUAL**  
**SENSITIVE GROUND-FAULT RELAY**

JUNE 8, 2009

REVISION 3

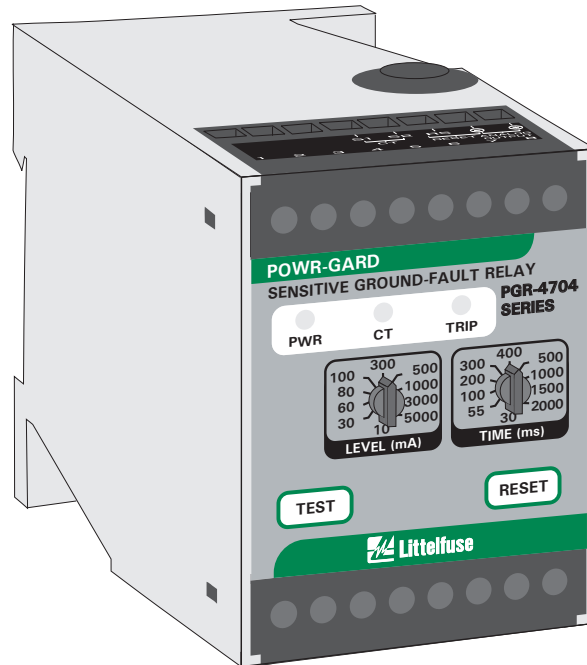

Copyright © 2009 by Littelfuse, Inc.

All rights reserved.

This page intentionally left blank.

**TABLE OF CONTENTS**

	Page
Table of Contents .....	i
List of Figures .....	i
List of Tables .....	i
<b>1. GENERAL</b> .....	<b>1</b>
<b>2. OPERATION</b> .....	<b>1</b>
2.1 Configuration-Switch Settings .....	1
2.1.1 Relay Operating Mode .....	1
2.1.2 Filter Selection .....	1
2.1.3 CT Verification .....	1
2.1.4 Reset Mode .....	1
2.1.5 Analog Output .....	1
2.2 Front-Panel Controls .....	1
2.2.1 Ground-Fault Trip Level .....	1
2.2.2 Ground-Fault Trip Time .....	1
2.2.3 Reset .....	1
2.2.4 Test .....	3
2.3 Front-Panel Indication .....	3
2.3.1 Power .....	3
2.3.2 Trip .....	3
2.3.3 CT Verification .....	3
2.4 Analog Outputs .....	3
2.5 Self Diagnostics .....	3
<b>3. INSTALLATION</b> .....	<b>3</b>
<b>4. TECHNICAL SPECIFICATIONS</b> .....	<b>7</b>
<b>5. ORDERING INFORMATION</b> .....	<b>8</b>
<b>6. PERFORMANCE TEST</b> .....	<b>9</b>

**LIST OF FIGURES**

	Page
1. PGR-4704 Outline and Mounting Details .....	2
2. Typical Connection Diagram .....	3
3. PGC-5000-Series Current Transformers .....	4
4. PGK-0055 Panel-Mount Adapter .....	5
5. PGK-0060 Panel-Mount Adapter .....	6
6. Ground-Fault-Test Circuit .....	9

**LIST OF TABLES**

	Page
1. Ground-Fault-Test Record .....	9

**DISCLAIMER**

Specifications are subject to change without notice. Littelfuse, Inc. is not liable for contingent or consequential damages, or for expenses sustained as a result of incorrect application, incorrect adjustment, or a malfunction.

This page intentionally left blank.

## 1. GENERAL

The PGR-4704 is a microprocessor-based ground-fault relay for ac power supply systems that require ground-fault detection as low as 10 mA. It is uniquely suited for very sensitive ground-fault protection on systems with significant harmonic content. Its output relay can operate in the fail-safe or non-fail-safe mode for undervoltage or shunt-trip applications. The PGR-4704 has one output relay with isolated normally open and normally closed contacts for use in independent control circuits. Additional features include LED trip and power indication, autoreset or latching trips with front-panel and remote reset, trip memory, test switch, self diagnostics, 0- to 1-mA and 0- to 5-V analog outputs, CT verification with LED indication, digital selector switches, and switch-selectable algorithms for fixed-frequency or variable-frequency applications.

Ground-fault current is sensed by a PGC-5000-series core-balance ground-fault current transformer. The trip level of the ground-fault circuit is digital-switch selectable from 10 to 5,000 mA. Trip time is digital-switch selectable from 30 to 2,000 ms.

## 2. OPERATION

### 2.1 Configuration-Switch Settings

See Fig. 1.

#### 2.1.1 Relay Operating Mode

Switch 1 is used to set the operating mode of the output relay. In the fail-safe mode, the output relay energizes when the ground-fault circuit is not tripped. In the fail-safe mode, non-volatile memory retains the trip status of the PGR-4704. If tripped, and the supply voltage is cycled, the PGR-4704 will remain tripped, with the trip relay de-energized and the TRIP LED on, until reset.

In the non-fail-safe mode, the output relay energizes when a ground-fault trip occurs. In the non-fail-safe mode, trip status is not retained in non-volatile memory.

#### 2.1.2 Filter Selection

Switch 2 is used to select the filtering algorithm for settings less than 1,000 mA. The selections are for fixed-frequency (50/60 Hz) or variable-frequency applications. The FIXED FREQUENCY setting uses a DFT filter that allows lower trip levels to be used by rejecting harmonics that can cause nuisance tripping.

The VARIABLE FREQUENCY setting uses a peak-detection algorithm with a wider band width for fault detection in variable-frequency drive applications.

The peak-detection algorithm is used for settings greater than 500 mA.

#### 2.1.3 CT Verification

Switch 3 is used to enable CT verification. In the ON position, a trip will occur if the PGC-5000-series current transformer is disconnected.

#### 2.1.4 Reset Mode

Switch 4 is used to select autoreset or latching trips. See Section 2.2.3.

#### 2.1.5 Analog Output

Switch 5 is used to select analog-output scaling. Selecting % OF 5 A results in full scale output (1 mA or 5 V) when ground-fault current is 5 A. Selecting % OF SETTING results in full scale output when ground-fault current equals the trip-level setting.

## 2.2 Front-Panel Controls

### 2.2.1 Ground-Fault Trip Level

The LEVEL (mA) selection switch is used to set the ground-fault trip level. For ground-fault detection, the ground-fault trip level must be substantially below the prospective ground-fault current. To avoid sympathetic tripping, the trip level must be above the charging current of the protected feeder.

### 2.2.2 Ground-Fault Trip Time

The PGR-4704 has a definite-time trip characteristic. The TIME (ms) selector switch is used to set the ground-fault trip time for coordination with upstream and downstream ground-fault devices. Coordination requires the same trip level for all ground-fault devices in a system and the trip time to progressively increase upstream. The amount of equipment removed from the system will be a minimum if the first ground-fault device to operate is the one immediately upstream from the fault.

### 2.2.3 Reset

If the Reset Mode switch is in the LATCHING position, a trip remains latched until the RESET switch is pressed or the remote-reset terminals (6 and 7) are momentarily connected. In the non-fail-safe relay operating mode, cycling the supply voltage will also reset the PGR-4704.

If the Reset Mode switch is in the AUTORESET position, a trip will reset when the fault is removed.

The reset circuit responds only to a momentary closure so that a jammed or shorted switch will not prevent a trip. The front-panel RESET switch is inoperative when the remote-reset terminals are connected.

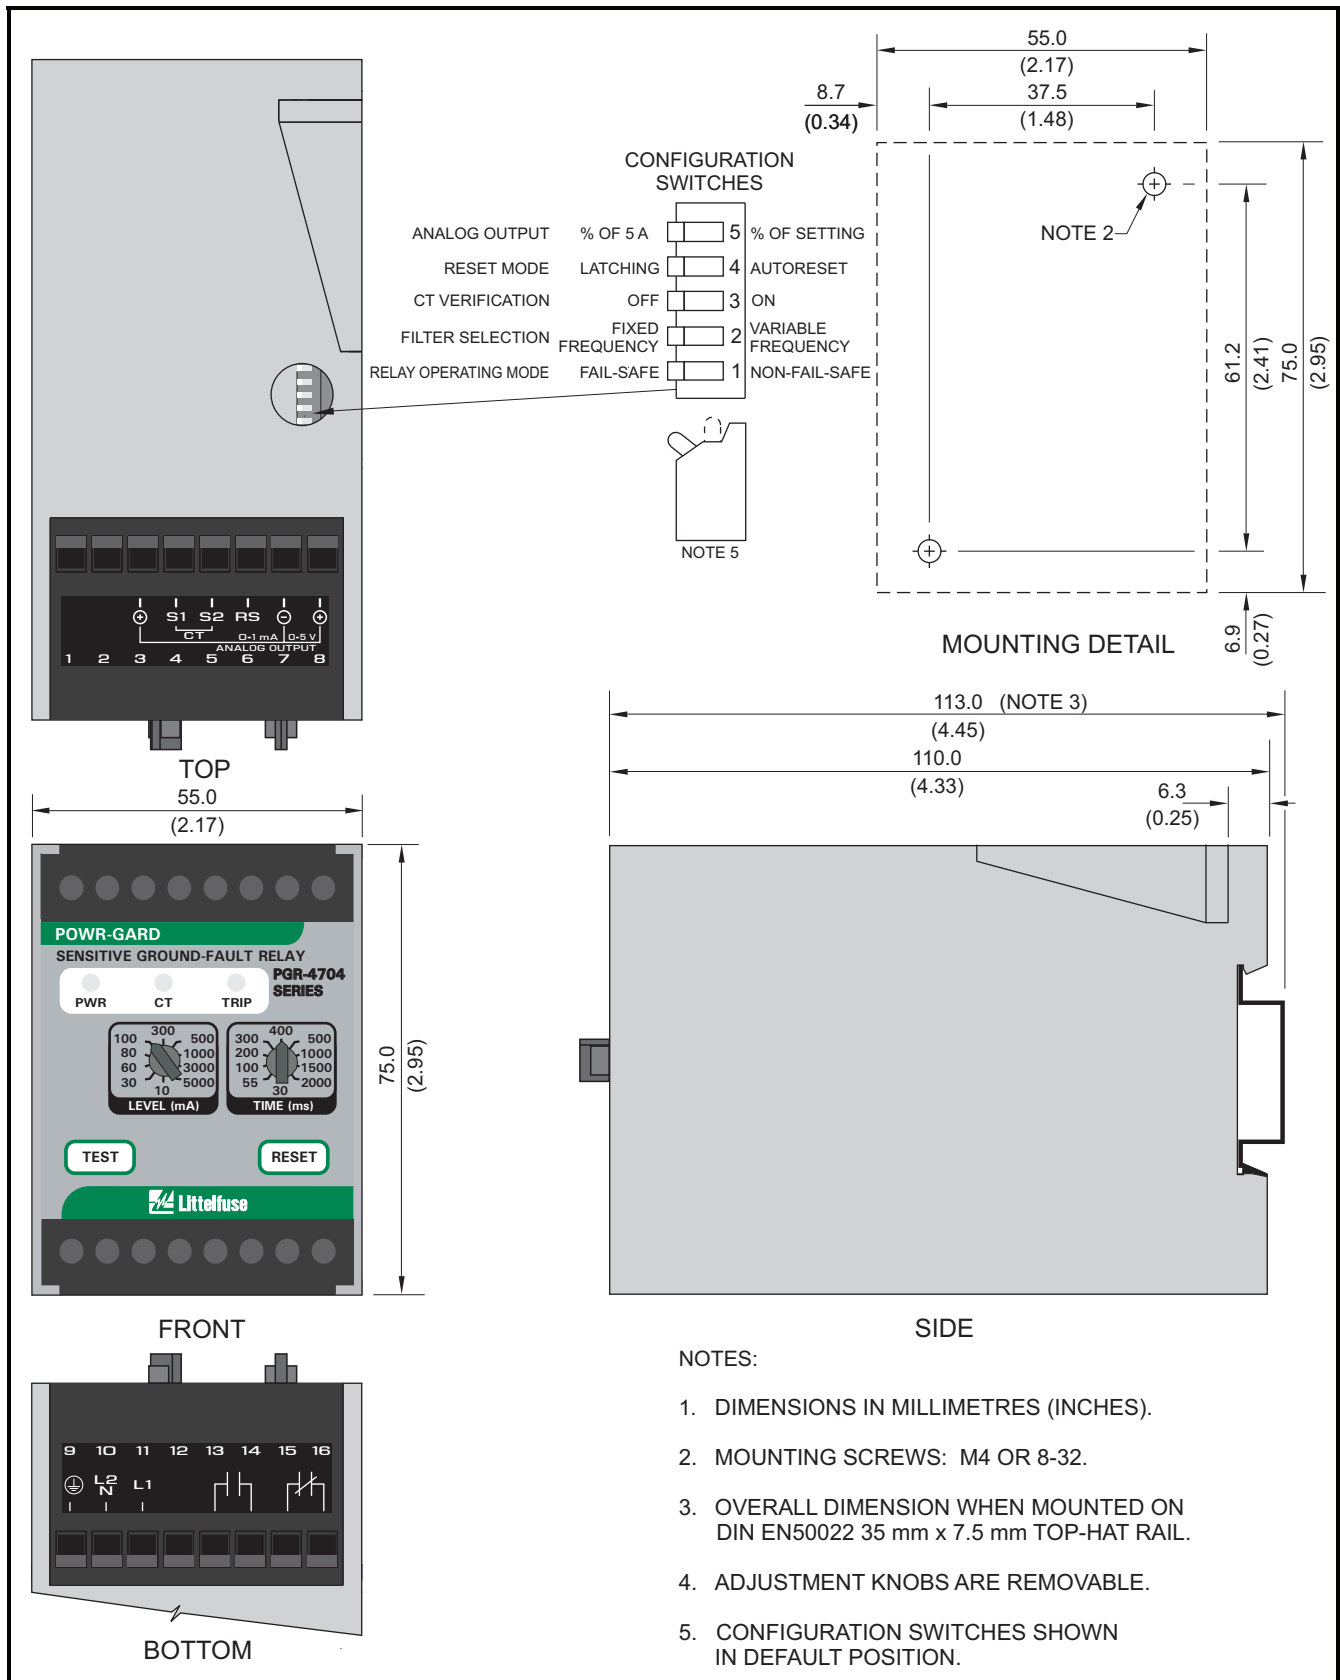


FIGURE 1. PGR-4704 Outline and Mounting Details.

### 2.2.4 Test

The TEST switch is used to test the ground-fault circuit, the indication, and the output relay. When the TEST switch is pressed for one second, a test signal is applied to the ground-fault-detection circuit, the circuit will trip, the TRIP LED will light, and the output relay will operate.

### 2.3 Front-Panel Indication

#### 2.3.1 Power

The green LED labeled PWR indicates presence of supply voltage.

#### 2.3.2 Trip

The red LED labeled TRIP indicates a trip. A solid red LED indicates a ground-fault trip and a flashing LED indicates a trip initiated by a CT fault. Two fast flashes of the TRIP LED indicate a diagnostic trip. See Section 2.5.

#### 2.3.3 CT Verification

The green LED labeled CT indicates that a PGC-5000-series current transformer is connected, even if CT verification is disabled.

### 2.4 Analog Outputs

Non-isolated, 0- to 1-mA (terminal 3) and 0- to 5-V (terminal 8) analog outputs indicate ground-fault current sensed by the CT.

### 2.5 Self Diagnostics

A diagnostic trip is indicated by two fast flashes of the TRIP LED. It can be caused by a problem detected by the watchdog timer, or from an incorrect reading from non-volatile memory. Press RESET or cycle supply voltage. If the problem persists, consult the factory.

## 3. INSTALLATION

**Note:** Mounting, terminal block connections and wiring must conform to applicable local electrical codes. Check all applicable codes prior to installation.

This ground-fault monitoring system consists of a PGR-4704 ground-fault relay and a PGC-5000-series CT connected as shown in Fig. 2.

A PGR-4704 can be surface or DIN-rail mounted. See Fig. 1. Panel mounting requires a PGK-0055 or PGK-0060 Panel-Mount Adapter. See Figs. 4 and 5.

Use terminal 11 (L1) as the line terminal on ac systems or the positive terminal on dc systems. Use terminal 10 (L2/N) as the neutral terminal on ac systems or the negative terminal on dc systems. Connect terminal 9 ( $\ominus$ ) to ground.

Pass the phase conductors through the CT window and position them in the centre of the opening (for 4-wire and single-phase systems, also pass the neutral conductor through the CT window). Do not pass ground conductors through the CT window. In applications that require shields or drain wires to pass through the CT window, return them through the CT window before connecting them to ground. Connect a PGC-5000-series CT to terminals 4 and 5, connect the shield to terminal 5, and ground terminal 5. See Fig. 3 for PGC-5000-series CT dimensional drawings.

Remove the connection to terminal 9 for dielectric-strength testing—all inputs and outputs have ANSI/IEEE C37.90 surge-protection circuits that conduct above 300 Vac.

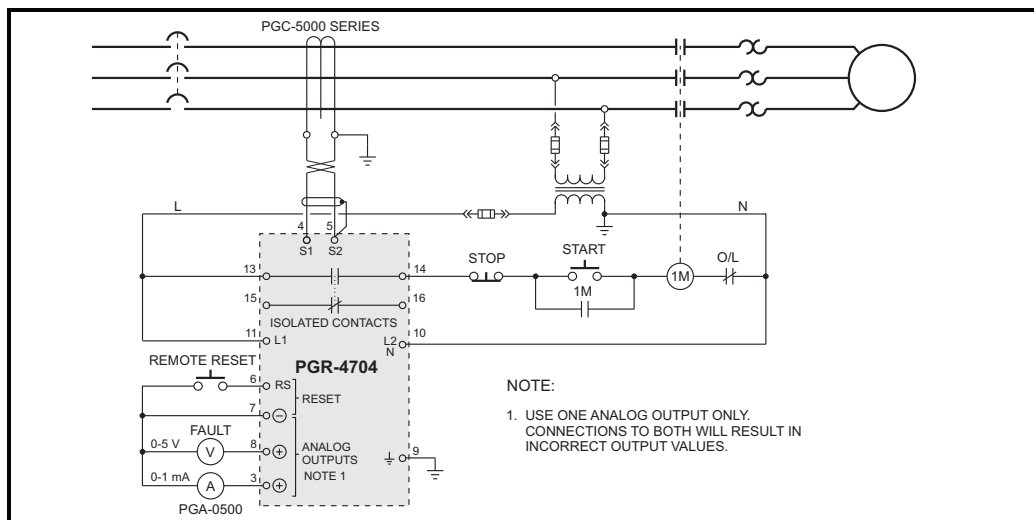


FIGURE 2. Typical Connection Diagram.

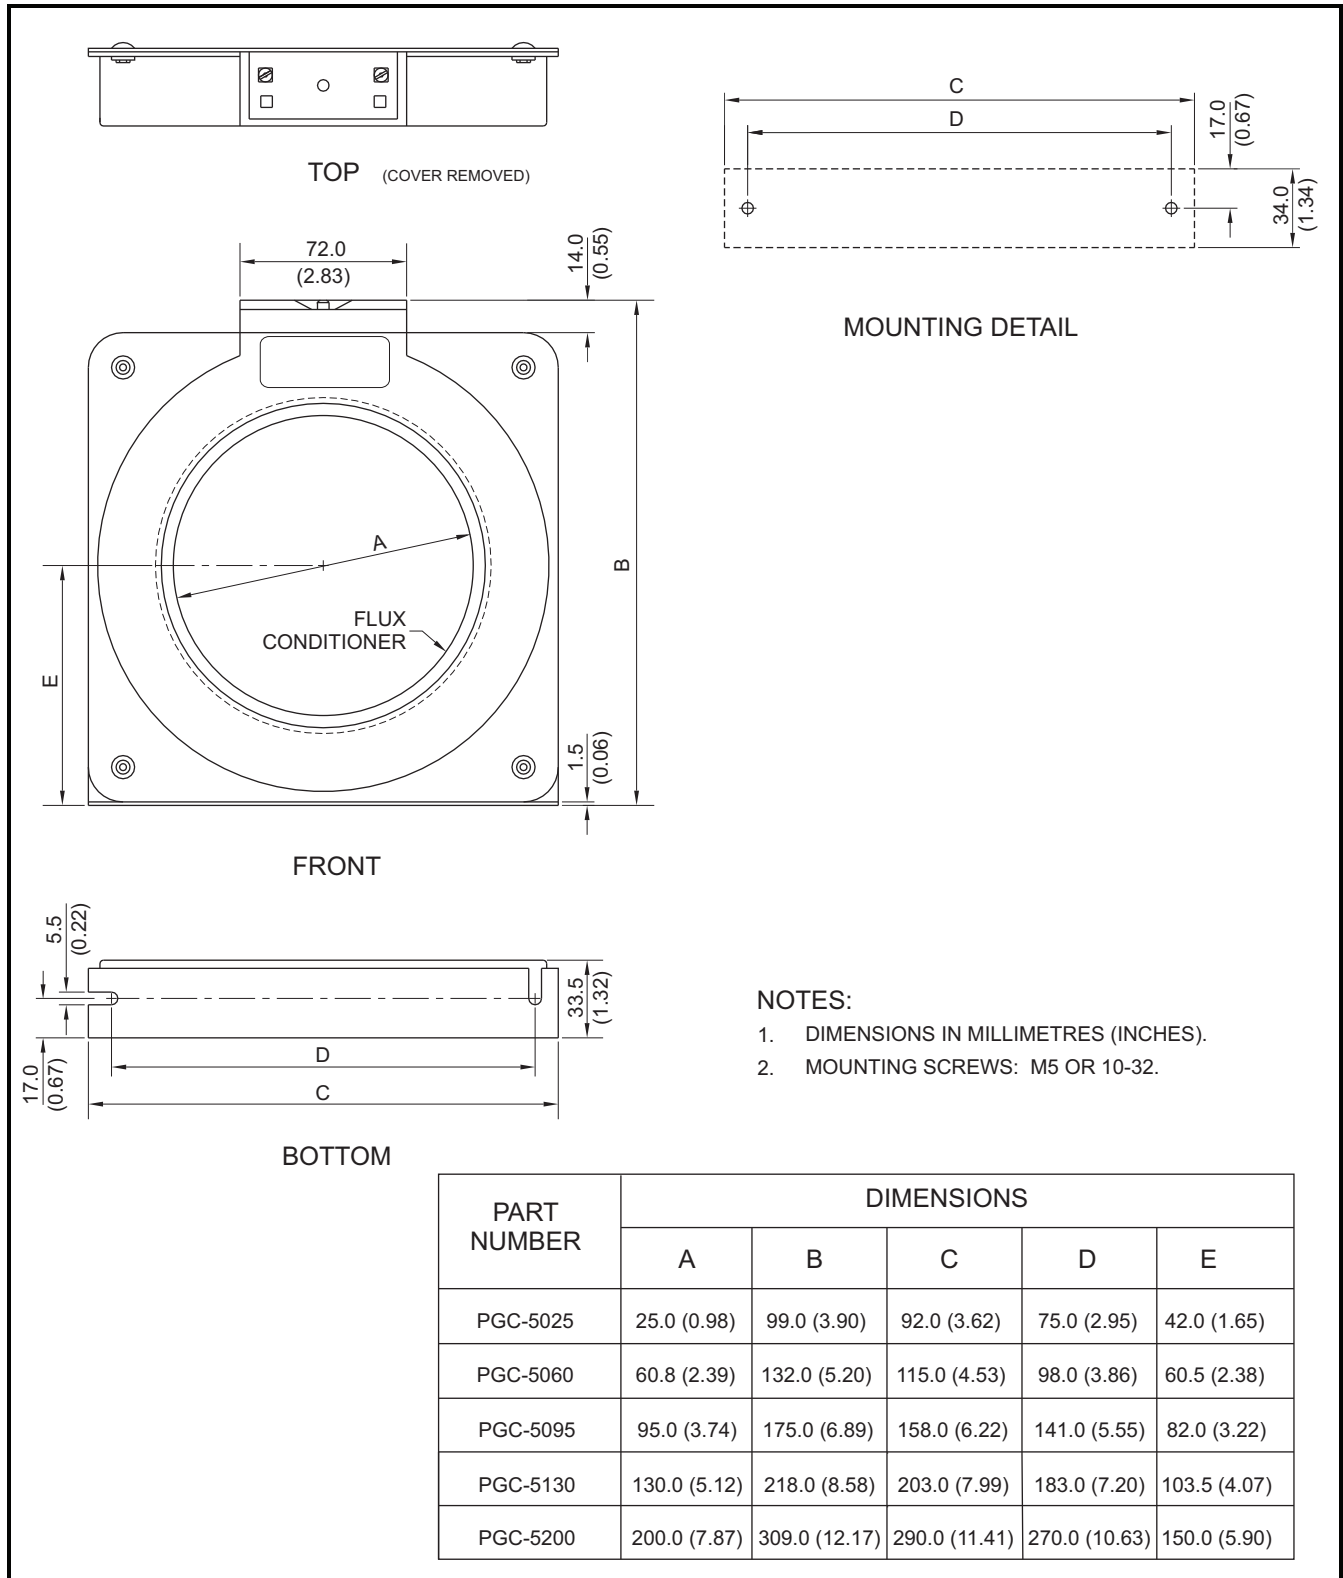


FIGURE 3. PGC-5000-Series Current Transformers.



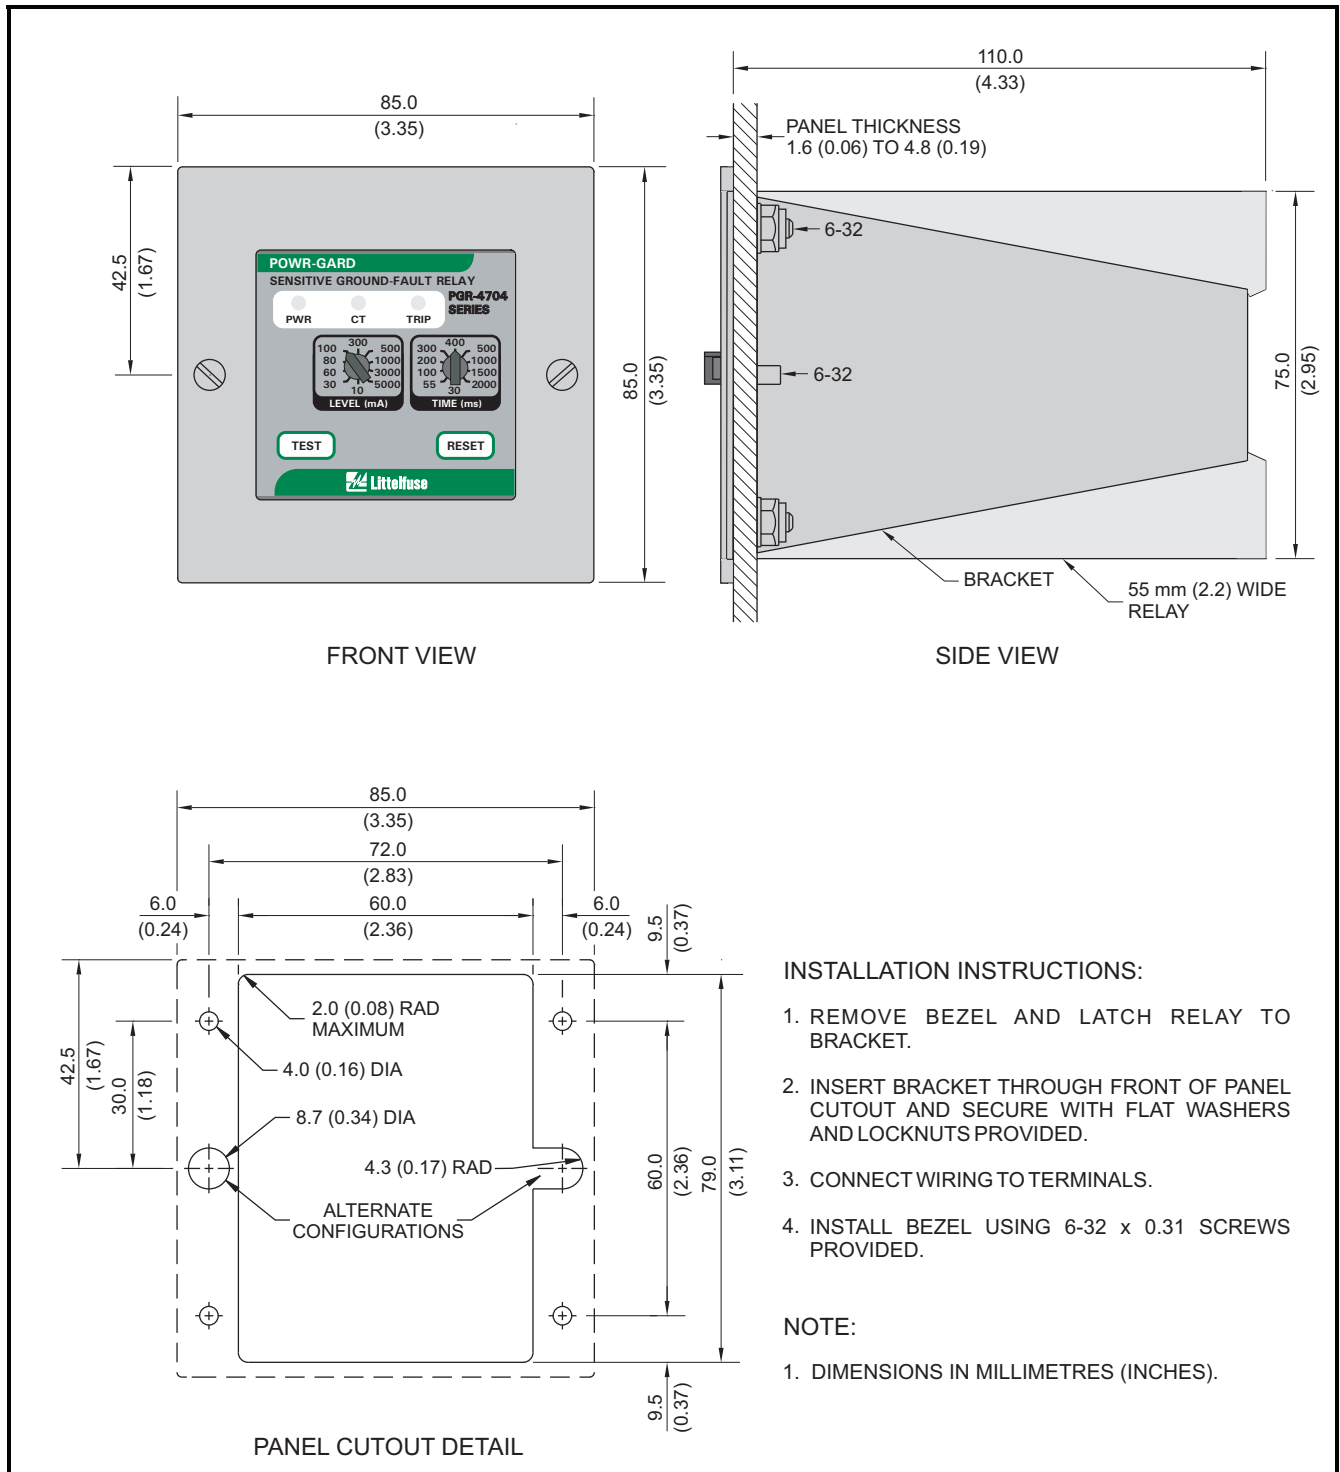


FIGURE 4. PGK-0055 Panel-Mount Adapter.

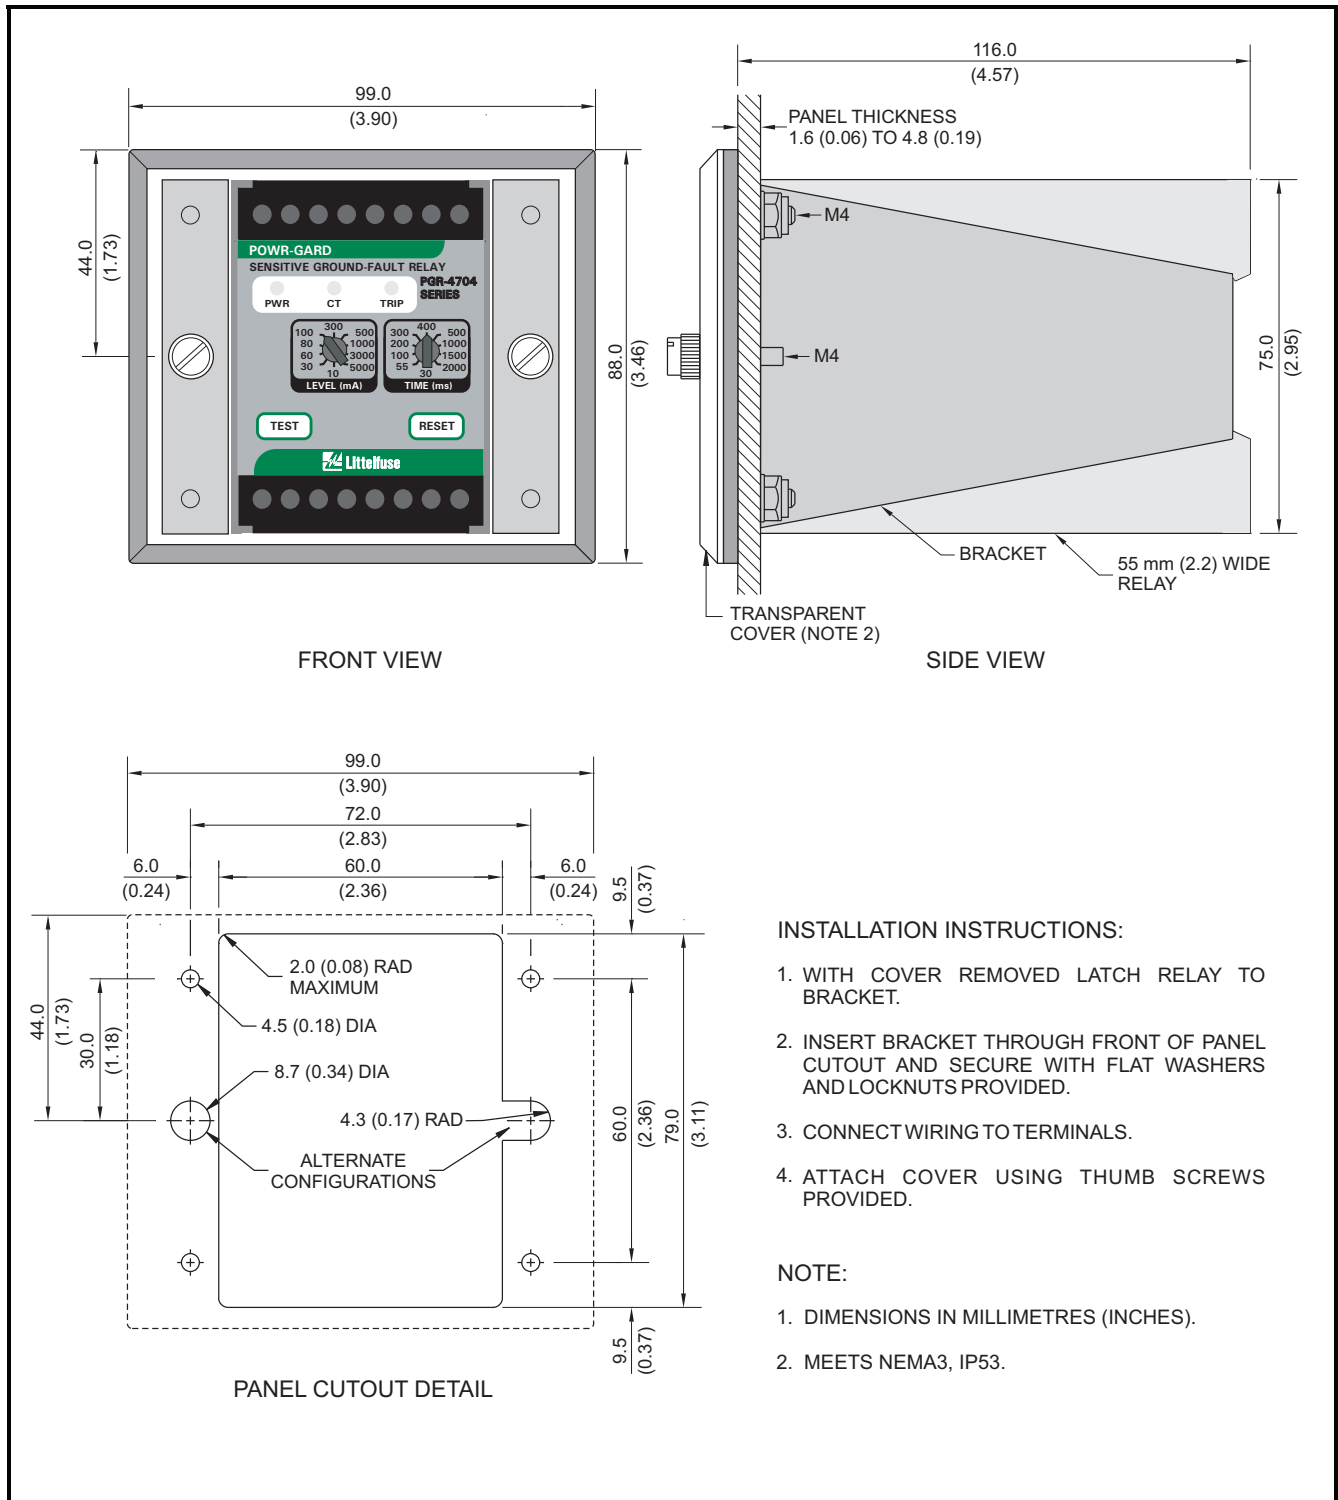


FIGURE 5. PGK-0060 Panel-Mount Adapter.

#### 4. TECHNICAL SPECIFICATIONS

##### Supply:

0U Option .....	2.5 VA, 120 to 240 Vac, (+20, -55%) 50/60 Hz, 2.0 W, 100 to 240 Vdc, (+20, -25%)
0D Option .....	2.0 W, 12 to 30 Vdc, (+20, -25%)
0T Option .....	2.0 W, 40 to 55 Vdc, (+20, -25%)

Trip-Level Settings .....	10, 30, 60, 80, 100, 300, 500, 1,000, 3,000, and 5,000 mA
---------------------------	---

Trip-Time Settings .....	30, 55, 100, 200, 300, 400, 500, 1,000, 1,500, and 2,000 ms
--------------------------	---

##### Accuracies: <sup>(1,2)</sup>

##### Trip Level: <sup>(3,4)</sup>

1,000 to 5,000 mA .....	+2, -10% (60 Hz) +0, -12% (50 Hz)
60 to 500 mA .....	+0, -10%, 10 mA min
30 mA .....	+0, -6 mA
10 mA .....	2 mA

Trip Time <sup>(5)</sup> .....	5% of Setting, 20 ms min
--------------------------------	-----------------------------

##### Input:

Algorithms <sup>(6)</sup> ..... DFT Digital or Peak

DFT 3 dB Frequency Response .....	32 to 86 Hz (<1,000 mA)
--------------------------------------	----------------------------

Peak 3 dB Frequency Response .....	20 to 420 Hz (<1,000 mA)
---------------------------------------	-----------------------------

Peak 3 dB Frequency Response .....	20 to 120 Hz (≥1,000 mA)
---------------------------------------	-----------------------------

CT ..... PGC-5000-Series CT  
 CT Detection ..... Open-Circuit Detection

##### Thermal Withstand:

Continuous .....	25-A Ground-Fault Current
1-Second .....	400-A Ground-Fault Current

##### Analog Output:

Modes ..... % of 5 A or % of Trip-  
 Level Setting

##### Range:

Terminal 3 .....	0 to 1 mA
Terminal 8 .....	0 to 5 Vdc

##### Output Impedance:

Terminal 3 .....	4,970 Ω
Terminal 8 .....	220 Ω

Reset ..... Front-Panel Switch and  
 Remote N.O. Contact

Functional Test ..... Front-Panel Switch

##### Output Relay:

Contact Configuration ..... Isolated N.O. and N.C.  
 Operating Mode ..... Fail-Safe or Non-Fail-  
 Safe

CSA/UL Rating ..... 8 A Resistive, 250 Vac,  
 8 A Resistive, 30 Vdc

##### Supplemental Contact Ratings:

Make/Carry 0.2 s ..... 20 A  
 Carry Continuous ..... 8 A

##### Break:

dc .....	30 W Resistive, 15 W Inductive (L/R = 0.04)
ac .....	2,000 VA Resistive 1,400 VA Inductive (PF = 0.4)

Subject to maximums of 8 A and  
 250 V (ac or dc).

Operating Mode ..... Latching or Autoreset

Terminals ..... Wire Clamping,  
 24 to 12 AWG  
 (0.2 to 2.5 mm<sup>2</sup>)  
 Conductors

##### Dimensions:

Height .....	75 mm (3.0")
Width .....	55 mm (2.2")
Depth .....	115 mm (4.5")

Shipping Weight ..... 0.45 kg (1 lb)

##### Environment:

Operating Temperature ... -40°C to 60°C  
 Storage Temperature ..... -55°C to 80°C  
 Humidity ..... 85% Non-Condensing

(1) Detection limit (A) = (setting in mA – 5,610) / -1.4.

(2) At 50 or 60 Hz unless otherwise noted.

(3) PGC-5000-series CT included.

(4) Maximum lead resistance of 2 Ω.

(5) Trip time at 3 x trip-level setting.

(6) Peak algorithm for trip-level settings ≥1,000 mA.

Surge Withstand .....	ANSI/IEEE 37.90.1-1989 (Oscillatory and Fast Transient)
EMC Tests:	
Verification tested in accordance with EN 50263:2000 Electrostatic Discharge .....	IEC 61000-4-2, EN 61000-4-2, 6 kV Contact Discharge 8 kV Air Discharge
Radiated RF.....	IEC 61000-4-3, EN 61000-4-3 10 V/m, 80-1,000 MHz, 80% AM (1 kHz) 10 V/m, 900 MHz, 200 Hz Pulse Modulated
Fast Transient.....	IEC 61000-4-4, EN 61000-4-4 ±2 kV Common Mode ±1 kV Differential Mode
Surge Immunity.....	IEC 61000-4-5, EN 61000-4-5 ±2.0 kV Common Mode ±1.0 kV Differential Mode
Conducted RF.....	IEC 61000-4-6, EN 61000-4-6 10 Vrms, 0.15-80 MHz, 80% AM (1 kHz)
Magnetic Field .....	IEC 61000-4-8, EN 61000-4-8 50 Hz, 30 A/m (continuous) 50 Hz, 300 A/m (1 to 3 seconds)
Voltage Interruption .....	IEC 255-22-11, EN 60255-11 100% for 2, 5, 10, 20, 50, 100, & 200 ms

MHz Burst .....	IEC 255-22-1, EN 60255-22-1 1 kV Differential Mode 2.5 kV Common Mode
-----------------	---

RFI Compliance .....	FCC Part 15, Subpart B, Class A – Unintentional Radiators
----------------------	---

Certification .....	CSA (Canada and USA)
---------------------	----------------------



CE (European Union)



Complies to IEC 61010-1:2001 (2<sup>nd</sup> Edition);  
 EN 61010-1:2001 (2<sup>nd</sup> Edition) Safety Requirements  
 for Electrical Equipment for Measurement,  
 Control, and Laboratory Use – Part 1

## 5. ORDERING INFORMATION

PGR-4704-0	<input type="checkbox"/>
	└─ U Universal 120/240-Vac/Vdc Supply
	D 12/24-Vdc Supply
	T 48-Vdc Supply

PGA-0500 .....	Analog Percent Current Meter
PGC-5025 .....	Current Transformer, 25.0-mm (0.98") Window
PGC-5060 .....	Current Transformer, 60.8-mm (2.39") Window
PGC-5095 .....	Current Transformer, 95.0-mm (3.74") Window
PGC-5130 .....	Current Transformer, 130.0-mm (5.12") Window
PGC-5200 .....	Current Transformer, 200.0-mm (7.87") Window
PGK-0055 .....	Panel-Mount Adapter, NEMA 1
PGK-0060 .....	Panel-Mount Adapter, NEMA 3, IP53
PGK-0003 .....	Adapter Plate, GEC/MCGG

Consult factory for custom mounting adapters.



This page intentionally left blank.